

VXi BlueParrott[®] Reveal Pro[™] User Guide

TABLE OF CONTENTS

Safety Information	3
Package Contents	3
Glossary of Terms	4
Headset Overview	4
Charging the Headset	5
• Battery Power Indicators	
• Operation While Using the Charger/Adapter	
Getting Started	6
• On/Off/Standby	
• Pairing with a Phone	
– NFC (One-Touch) Pairing	
– Regular Pairing	
• Wearing and Adjusting the Reveal Pro	
• Making/Taking Calls	
Parrott Button™	8
Advanced Features and Functions	9
• Multiple Device Pairing	
• Multipoint Mode	
• Additional Features and Functions	
– Call Waiting/Rejecting a Call	
– Rejecting a Call	
– Phone Voice Control (e.g. Siri® or Google Now™)	
– Muting	
– Turning Indicator Lights On/Off	
Functions & Indicators Tables	11

SAFETY INFORMATION


IMPORTANT SAFETY NOTE: Prolonged exposure to high volume levels can damage your hearing. To avoid injury, set the volume to the lowest comfortable level. If you experience ringing in your ears, or voices sound muffled, stop using the headset. Avoid turning up the volume to block noisy surroundings. It's possible for your ears to adapt to volume that is too high, and this could result in permanent hearing damage without any noticeable discomfort.

- Check with local and state laws regarding cell phone/headset usage while operating a motor vehicle.
- Do not immerse any part of this product in water.
- Plastic bags and small parts may cause choking if ingested. Keep them away from small children and pets.
- Use only the power cords included with this product.
- Avoid temperatures exceeding 140° F (will cause equipment failure).

PACKAGE CONTENTS

1. BlueParrott® Reveal Pro™ Headset
2. Carrying Case
3. Choice of Ear Buds (multiple sizes)
4. USB Charging Cable
5. Choice of Ear Hooks (multiple sizes)
6. Auto Adapter
7. Quick-Start Guide*
8. Warranty and Compliance Insert*

**Not pictured.*

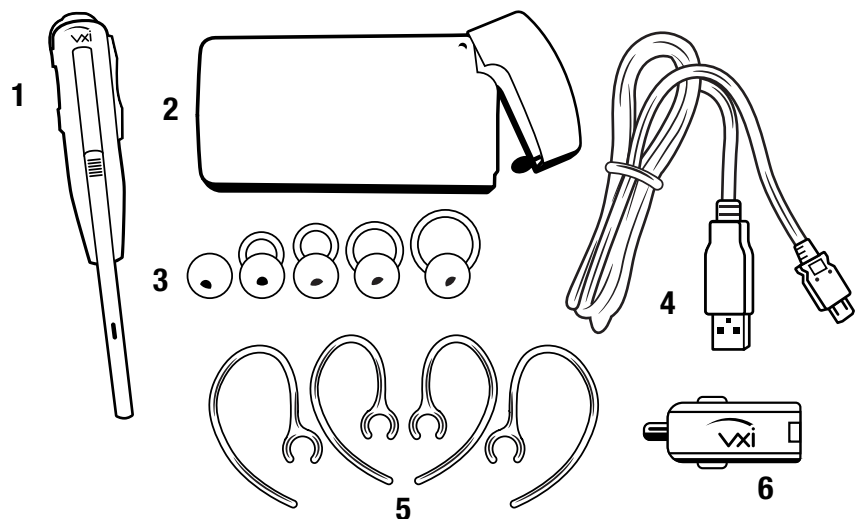



Images are not shown to scale.

GLOSSARY OF TERMS

- **On:** Headset is on, but there is no connection to the phone (red light will flash).
- **MFB:** Abbreviation for “Multifunction Button.”
- **Multipoint Mode:** Multipoint Mode allows you to connect and switch between two Bluetooth devices.
- **Paired:** Two Bluetooth devices agree to communicate with one another.
- **Standby Mode:** Headset is on, Bluetooth link is active, and the user is not on a call (blue light will flash).
- **Talk Mode:** Headset is in use with the cell phone while the cell phone is on an active call (blue light will flash).


HEADSET OVERVIEW

- A. Volume Up/Mute
- B. Volume Down
- C. Parrott Button™
- D. Extendable Microphone Boom
- E. On/Off Switch
- F. Indicator Lights
- G. Multifunction Button (MFB)
- H. NFC Zone (pictured below)

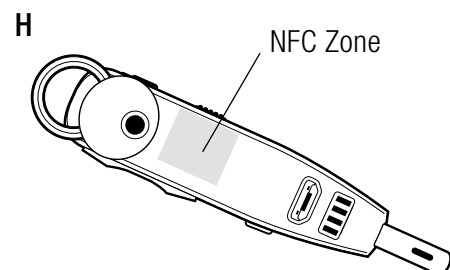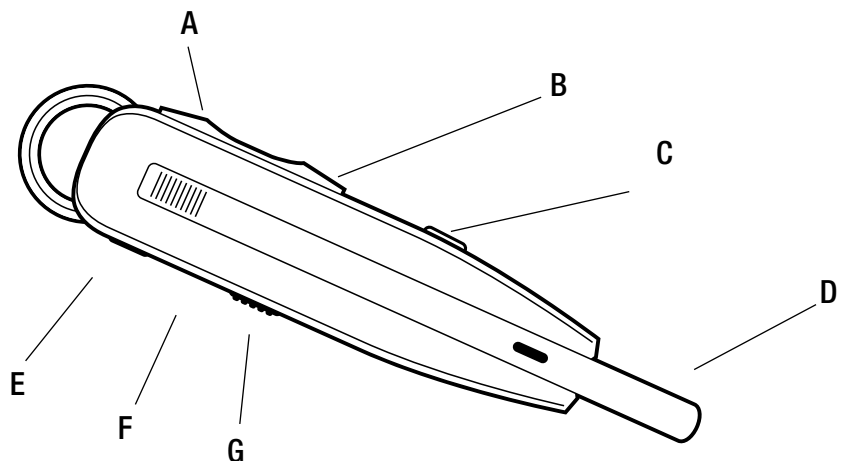

CHARGING THE HEADSET

Connect USB charger cord into the headset's USB charging port. If the headset is *not* fully charged, the indicator will turn red. When the indicator turns blue and *stays* blue, the unit is fully charged. A *fully* discharged battery will need approximately 1.5 hours to achieve a complete charge.

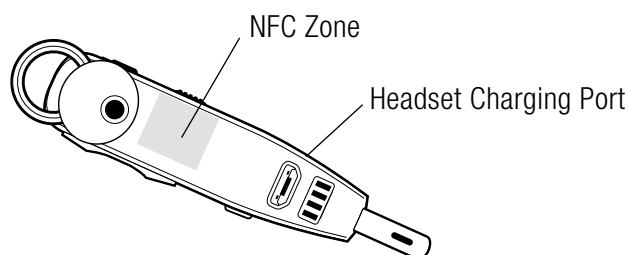


Battery Power Indicators

While charging, the indicator light shows the level of battery power on your Reveal as follows:

Blue light: Fully charged. Over 7 hours' talk time.

Red light: Less than a full charge.

For best performance, keep charging the headset when not in use.

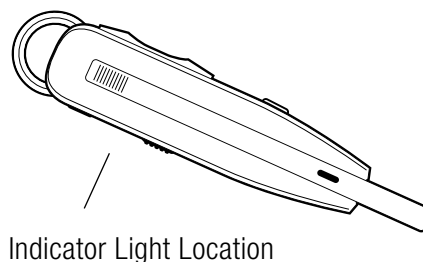

Operation While Using the Charger/Adapter

The Reveal Pro headset should be operated from battery power only. If you connect the headset to a charger while it is turned on, it will reset and shut off. To turn it back on again, first unplug the headset from the USB charging cord, slide the switch to the "off" position (if not already done), then back to the "on" position.

NOTE: Do not attach the charger mid-call. This will cause the headset to reset, and the call will be sent back to the phone.

GETTING STARTED

On/Off/Standby

Turn Headset On: Slide the switch down towards the boom to expose a green bar in the switch cavity. The LED will flash blue three times and you will hear a voice prompt (in English), “Power on.”


Turn Headset Off (conserves battery power): Slide the switch up towards the back of the headset to expose a red bar in the switch cavity. The LED will flash red four times and you will hear a voice prompt (in English), “Power off.”

Standby Mode: Once the headset is turned on (after the initial pairing), it will attempt to connect to the last device that it was paired with, putting itself into Standby Mode.

Pairing with a Phone

NFC (One-Touch) Pairing

1. Confirm that your cell phone is NFC-capable.
2. Make sure that NFC is enabled on your cell phone.
3. Turn the headset on.
4. Place the NFC zone of your cell phone against the NFC zone of the headset and hold together while your cell phone registers the headset.
5. Follow the prompts on your cell phone until it confirms pairing is successful.

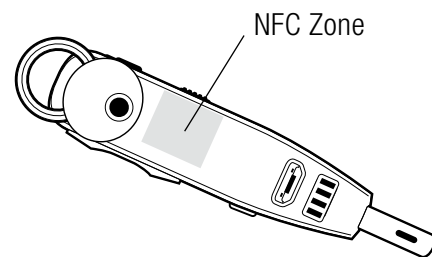

Note: NFC and One-Touch Pairing are dependent on your cell phone. The size and sensitivity of your phone's NFC zone and how to connect the headset may vary between devices.

Manual Pairing

Placing Headset into Pairing Mode

When you turn the headset on for the first time, or if its pairing memory has been wiped clear, it will go into pairing mode automatically. If the headset was previously paired with another device and you are not going to use NFC Pairing, you will need to put it into pairing mode manually.

1. Power on the headset and make sure it does not connect to another device.
2. Press and hold the MFB for 5 seconds, until the light is flashing red and blue. You will hear the voice prompt “Discovering” (in English).
3. The headset will be visible for pairing to devices for 120 seconds.

Pairing to a Cell Phone

1. Make sure that other Bluetooth devices are turned off or out of range.
2. Place the headset into pairing mode.
3. Put your cell phone in Bluetooth Search/Scan Mode per the manufacturer's instructions.
4. Select “VXi Reveal Pro” to pair. (Passcode is “0000” if needed.)
5. When connected, the headset will give you the voice prompt, “Your headset is connected” (in English) and the indicator light will flash blue.


GETTING STARTED (continued)

Wearing and Adjusting the Reveal Pro


The headset is provided with the medium-loop earbud already attached. If you need to change it, peel it off and replace with the earbud of your choice.

The headset can be worn on either ear, with or without the ear hook.


1. Choose the ear bud that best fits your ear. The loop on the ear bud should tuck into the back curve of your ear. If it feels too loose or tight, try a different size.

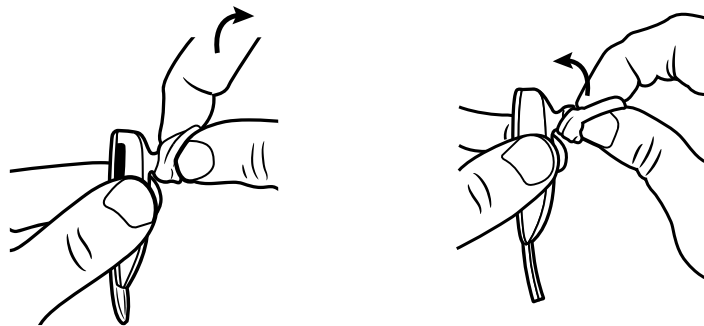

2. Rotate the ear bud on the headset to position, and if desired, clip on one of the optional ear hooks. Ear hooks are configured for either left or right-ear wearing and are marked with an “L” for left or “R” for right to show which side they are for. To attach an ear hook, clip the “C” of the hook over the neck of the receiver.

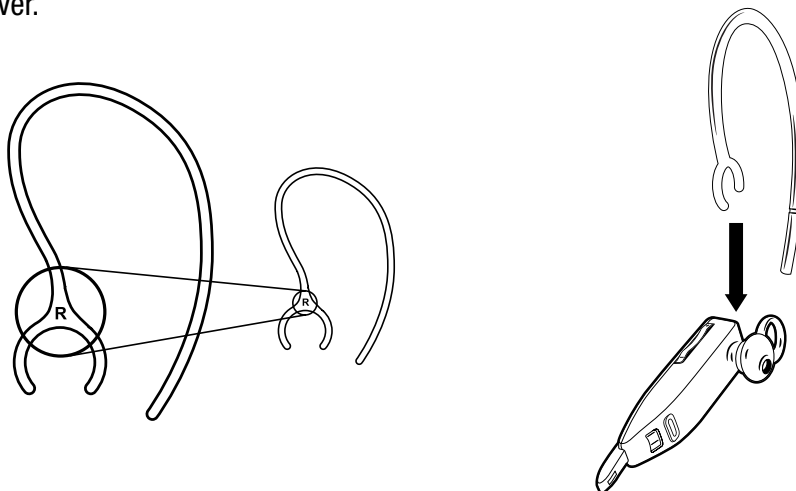


For best noise-canceling performance, angle the microphone boom towards the corner of your mouth. Positioning is important; small adjustments in microphone placement can improve performance.

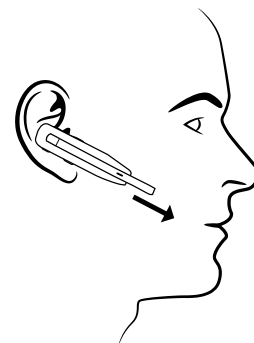


GETTING STARTED (continued)

Using the Headset in High-Noise Situations

The microphone boom is extendable for greater levels of noise cancelation in noisy environments. Simply slide the boom in or out as needed.

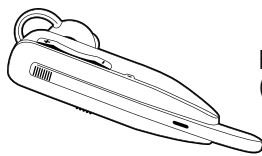

For Normal Use
(Low-Noise Environment)

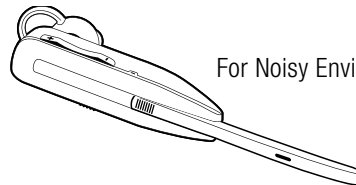

For Noisy Environments

Making/Taking Calls

The headset must be on and connected with your phone.

Making a Call

1. Dial the desired number on your phone. You will hear the call in the headset.
2. To end the call, press the MFB once. The call will end and the headset will enter standby mode.

Answering a Call

1. When you receive a call, you will hear ring tones in the headset. Press the MFB once to answer the call.
2. To end the call, press the MFB once. The call will end and the headset will enter standby mode.

Rejecting an Incoming Call

1. To reject an incoming call, press and hold the MFB for two seconds. You will hear a two-note descending tone and the call will be transferred to your voicemail (if available).

PARROTT BUTTON™

As provided from the factory, the Parrott Button provides an easy way to mute the headset. You can also configure the button for other functions, such as phone number speed dial, or to launch a particular application on your phone.

To change the Parrott Button function, download the BlueParrott app for your cell phone (Android or iOS) or VXi Updater for your PC.

Go to www.vxicorp.com/parrott for updates and more information.

ADVANCED FEATURES AND FUNCTIONS

Multiple Device Pairing and Multipoint Mode

The Reveal Pro has pairing memory for up to eight (8) devices. The headset can also use Multipoint Mode, which means that it can be connected to two (2) Bluetooth devices at the same time. You do not have to do anything to enable Multipoint Mode.

Using the Reveal Pro in Multipoint Mode

1. To use the headset in Multipoint Mode, first make sure the headset is paired with both your devices.
2. With both devices in range and with their Bluetooth enabled, turn the headset on.
3. As each Bluetooth device connects to the headset, you will hear the voice prompt (in English), "Your headset is connected."

The Reveal Pro will monitor both phones and enable you to answer a call on either one from the headset. If you are on a call and the other device receives a call, you will hear a notification in the headset.

Additional Features and Functions

i. Call Waiting/Rejecting a Call

If you are on an active call and a second call comes in, you will hear a low tone notification in the headset. If supported by your phone, you have the following option:

To accept the incoming call and end the active call, press the MFB once to end, and then once again to answer.

ii. Rejecting a Call

To reject an incoming call when not on another call, press and hold the MFB for 1-2 seconds.

iii. Phone Voice Control (e.g. Siri® or Google Now™)

Press the MFB once while the headset is in standby mode to initiate voice command functions on your phone. Support for this is phone dependent. See your phone's user guide for more information.

iv. Muting

The Parrott Button will act as a mute by default, unless configured for another function. The Volume Up button will also function to control mute.

–A quick press of the Parrott Button while on a call will engage the mute (unless otherwise configured). Press again to unmute.

–To use Volume Up to mute the headset microphone while on a call, press and hold the Volume Up button for 1-2 seconds. To unmute, press and hold the button again for 1-2 seconds.

–While muted, a reminder tone will sound every 10 seconds.

v. Turning Headset Indicator Lights On/Off

A *quick* press of the Volume Up and Volume Down buttons together will turn the headset indicator lights off. Repeat to turn the indicator lights on. When powering on the headset, the indicator lights will be in the same state as they were when last powered off.

ADVANCED FEATURES AND FUNCTIONS (continued)

Resetting Headset's Paired Devices List

This will reset or clear the headset's internal paired devices list. The headset must be on to perform this function.

1. Power on the headset. It does not matter if it connects to any devices.
2. Hold the headset near your ear and press and hold the Volume Up and the Volume Down buttons *together* for approximately 6-10 seconds until two low tones are heard. The LED will flash red two times, and then the headset will automatically go into Pairing Mode.
3. If you are not ready to pair the headset with a device, power it off. The pairing memory is now clear and will need to be paired to any desired devices before it can be used with them.

FUNCTIONS & INDICATORS TABLES

Standby Mode Functions

Function	Button/Duration of Press	LED Indicator	Audio Indicator	Voice Indicator
Power On	Slide switch towards boom	3 fast blue flashes	1 short tone	"Power on"
Power Off	Slide switch towards tail	4 fast red flashes	1 short tone	"Power off"
Enable Pairing Mode	MFB (5-6 seconds)	Alternating red and blue flash	NONE	"Discovering"
Volume Up	Volume Up (quick press)	NONE	1 short tone	NONE
Volume Down	Volume Down (quick press)	NONE	1 short tone	NONE
Phone Voice Control (Start/End)	MFB (quick press)	NONE	1 tone	NONE
Last Number Redial	Volume Down (1-2 seconds)	NONE	1 short tone	NONE
Disable LEDs	Volume Up/Volume Down (quick press)	NONE	1 short tone	NONE
Enable LEDs	Volume Up/Volume Down (quick press)	LEDs active	1 short tone	NONE
Reset Paired Devices	Volume Up/Volume Down (5-6 seconds)	2 fast red flashes	2 low tones	NONE

FUNCTIONS & INDICATORS TABLES (continued)

In-Call Functions

Function	Button/Duration of Press	LED Indicator	Audio Indicator	Voice Indicator
Volume Up	Volume Up (quick press)	NONE	1 short tone	NONE
Volume Down	Volume Down (quick press)	NONE	1 short tone	NONE
Mute (On/Off)	Parrott Button (quick press)	NONE	Single tone, reminder tone every 10 seconds	NONE
Mute (On/Off)	Volume Up (1-2 seconds)	NONE	Single tone, reminder tone every 10 seconds	NONE
Mute Reminder	NONE	NONE	1 tone (every 10 seconds)	NONE
Answer a Call	MFB (quick press)	NONE	2 rising tones	NONE
End a Call	MFB (quick press)	NONE	2 falling tones	NONE
Reject a Call*	MFB (1-2 seconds)	NONE	2 falling tones	NONE

**Sends call to voicemail (if available)*

FUNCTIONS & INDICATORS TABLES (continued)

Notifications

Notification	Button/Duration of Press	LED Indicator	Audio Indicator	Voice Indicator
Mute Reminder	NONE	NONE	1 tone (every 10 seconds)	NONE
Headset Connects to Device	NONE	Blue light, fast flash	NONE	"Your headset is connected"
Disconnect from Device	NONE	Red light, slow flash	NONE	"Your headset is disconnected"
Out of Range (Link Loss)	NONE	Red light, slow flash	1 short tone	NONE
Low Battery	NONE	Red light, fast flash	NONE	"Battery low" every 60 seconds
Connect A2DP (Music Streaming)	NONE	Blue MFB (quick, double-flash)	NONE	NONE
Active Call	NONE	Blue flash, once per second	NONE	NONE



VXi Corporation | 271 Locust Street, Dover, NH 03820 USA

Toll-Free (USA): 800-742-8588 | Phone: +1 603-742-2888

blueparrott.com